



3001 S. 288<sup>th</sup> ST. #385  
 Federal Way, WA 98003-8007  
 Phone: 206-274-5282 / 877-749-5739  
 Fax: 206-388-3579  
 www.baketechnpros.com

## Tenor Timer Configuration & Use Instructions

Model 655



### TO PROGRAM TIME:


1. Push the SET button and release.
2. Push the applicable ▲ button to set to the desired time.
3. Push the ENT button and release

### TO OPERATE:

1. Push the **Green** START button on the oven's control panel to start the timer. The timer will display a blinking colon ( : ) when operating. NOTE: the time may be stopped at any time by pushing the **Red** STOP button.
2. When the set time has elapsed a buzzer will sound. Push the **Red** STOP button to silence the buzzer. The timer will reset itself to the programmed time. NOTE: the steam timer does not have a buzzer but will automatically reset itself to the programmed time at cycle end.

### DIP SWITCH SETTINGS:

BAKE TIMER

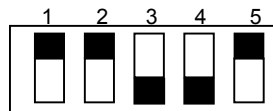


HOURS  
MINUTES

BAKE TIMER



MINUTES  
SECONDS

STEAM TIMER

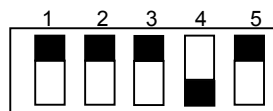

SECONDS